

MODE CW CW setting 設定例

CW SETTING		
MODE CW		
MODE CW KEYER DECODE CW	AGC FAST DELAY	160msec
	AGC MID DELAY	500msec
	AGC SLOW DELAY	1500msec
	LCUT FREQ	250Hz
	LCUT SLOPE	6dB/oct 18dB/oct
	HCUT FREQ	1200Hz
	HCUT SLOPE	6dB/oct 18dB/oct
	BACK	

CW SETTING		
MODE CW		
MODE CW KEYER DECODE CW	HCUT SLOPE	6dB/oct 18dB/oct
	CW OUT SELECT	MAIN SUB
	CW OUT LEVEL	50
	CW AUTO MODE	OFF 50M ON
	CW BK-IN TYPE	SEMI FULL
	CW BK-IN DELAY	200msec
	CW WAVE SHAPE	4msec 6msec 8msec
	BACK	

CW SETTING		
MODE CW		
MODE CW KEYER DECODE CW	CW BK-IN TYPE	SEMI FULL
	CW BK-IN DELAY	200msec
	CW WAVE SHAPE	4msec 6msec 8msec
	CW FREQ DISPLAY	DIRECT FREQ
	PC KEYING	DTR
	QSK DELAY TIME	15msec
	CW INDICATOR	OFF ON
	BACK	